 





1. Once the gas can is empty, do not throw the used can into a fire or place it near an open fire.

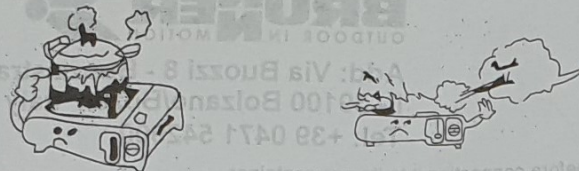

2. Keep the pan from overheating and keep the pan from overflowing onto the burner. If this does occur turn off the appliance and wipe with a dry towel. You may need to use a damp soapy cloth if you cannot remove the spillage easily, then dry with a towel.



 3. Choose a position where there is minimal wind. If you use your gas stove where the wind is strong or gusting the flame may extinguish or become irregular.

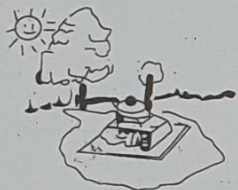

4. When using the appliance outdoors ensure you choose a shady area so that the unit is not in direct sunlight. Ensure that it is not placed directly onto soil or sand, always ensure it is mounted on a flat, even surface.



5. It is dangerous to use this appliance for anything other than its intended purpose. Using your cooker for drying clothes or igniting other materials will cause a fire.




6. If an incident occurs while using the appliance keep calm and turn the control knob into the OFF position and release the can by pulling up the gas canister holder lever.

### Safety & Guidance Notes


1. Do not use the appliance if it has damaged or worn seals.
2. Do not use the appliance if it is leaking, damaged or does not operate properly.
3. Only use the appliance in a well ventilated area in accordance with national requirements for the supply of combustion air and to avoid the dangerous building up of un burnt gases.
4. Always ensure that this appliance is used on a flat horizontal surface.
5. Always ensure that this appliance is not used near flammable materials, gasoline or paraffin.
6. Always ensure that the gas container is changed in a well ventilated location, preferable outside, away from any source of ignition, such as naked flames, pilots, electric fires and away from other people.
7. If there is a leak on your appliance (smell of gas), take it outside immediately into a well ventilated flame free location where the leak may be detected and stopped. If you wish to check for leaks on your appliance, do it outside. Do not try to detect leaks using a flame, use soapy water.
8. Always store in a cool dry place after use, ensuring that the unit has cooled before storage and is out of reach of children.
9. Always ensure that the burner is extinguished before disconnecting the gas canister.

## WARNINGS


1. AFTER EACH USE, PUSH THE STOP LEVER UPWARDS TO THE "OFF" POSITION AND TAKE OUT THE GAS CARTRIDGE.
2. DO NOT TRANSPORT THE APPLIANCE WITH THE GAS CARTRIDGE CONNECTED.
3. CAUTION: ACCESSIBLE PARTS MAY BECOME VERY HOT. KEEP YOUNG CHILDREN AWAY FROM THE APPLIANCE.
4. DO NOT USE THE APPLIANCE WITHOUT THE GRILL PLATE FITTED.
5. DO NOT FORCIBLY PUSH DOWN ON THE RETAINING LEVER. IF DIFFICULTIES ARE EXPERIENCED IN ENGAGING THIS LEVER PLEASE CHECK THAT THE GAS CANISTER IS CORRECTLY INSTALLED.
6. ALWAYS KEEP THE APPLIANCE CLEAN AND FREE FROM DEBRIS.
7. DO NOT MODIFY THE APPLIANCE IN ANY WAY.
8. MINIMUM DISTANCE TO ANOTHER GAS APPLIANCE IS 30CM.

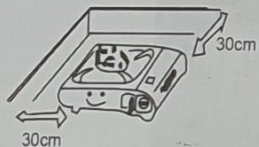


7. Choose a safe place to use the appliance. Do not use beneath shelves and near flammable goods. Keep the appliance more than 15cm away from the walls.

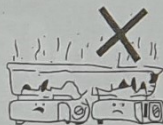

8. Keep the stove from over heating, do not put two of the cookers side by side as it will cause the appliances to overheat which could result in an explosion.

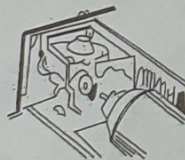

9. Be careful of gas leakage. Ensure that the gas can is placed on the can stay correctly and match the hole with the regulator correctly to avoid any gas leakage.

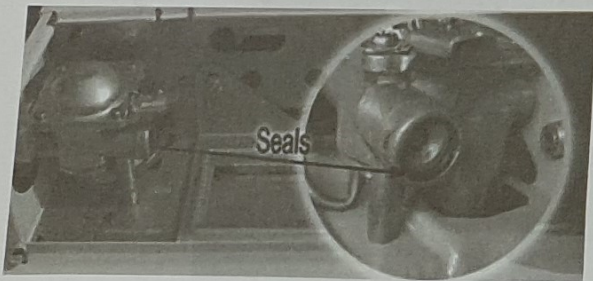

10. Always check that the seals (between the appliance and the gas container) are in place and in a good condition before connecting the gas container for the first time, repeat this at all times when replacing the gas container with a new one.